

TWO-WAY AUDIO/VOICE ALARM MODULE

Cat. No. 10A11-1

Installation Instructions and User's Guide



DI-021-OA103-00AAR2213
(10111-1)

INSTALLATION

ENGLISH

WARNINGS AND CAUTIONS

- Read and understand all instructions. Follow all warnings and instructions marked on the product.
- Do not use this product near water - e.g., near a tub, wash basin, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Never push objects of any kind into this product through openings, as they may touch dangerous voltages.
- SAVE THESE INSTRUCTIONS.

WARNINGS AND CAUTIONS

- Never install communications wiring or components during a lightning storm.
- Never install communications components in wet locations unless the components are designed specifically for use in wet locations.
- Never touch uninsulated wires or terminals unless the wiring has been disconnected at the network interface.
- Use caution when installing or modifying communications wiring or components.

DESCRIPTION

The Model 10A11-1, Rev C Two-Way Audio/Voice Alarm Module allows two-way communication with a central station after an alarm, paging and listening from an on-premises or remote phone, announcement of alarm and zone by voice, and voice messaging. The Model 10A11-1, Rev C also provides a line-level audio output that can be tied into an amplifier or whole home audio system, and a page output that is activated whenever the Model 10A11-1, Rev C generates audio output.

FEATURES

- Two independent audio amplifiers
- Two microphone inputs
- Line-level audio output (3.5mm jack)
- Page output (contact closure)
- Automatic gain control (AGC) for talk and listen
- Two-way or listen-only operation
- Control via standard Touch-Tone phone
- Connects to Leviton Speaker/Microphone Modules and/or Omni Consoles and Lumina Keypads with Built-in Speaker/Microphone
- Connects to Hi-Fi by Leviton and other whole home audio distribution systems for announcing voice messages and paging

SPECIFICATIONS

DIMENSIONS:	5.5" x 3.25"
OPERATING VOLTAGE:	6 to 14 VDC
OPERATING CURRENT:	500 mA maximum
SPEAKER IMPEDANCE:	8 Ω
AGC RANGE:	-22 dbm to +10 dbm
REQUIRED MICROPHONE TYPE:	Condenser w/ built-in preamp

INSTALLATION

Connect 8-ohm speaker(s) and two-wire electret microphone(s) to the Model 10A11-1, Rev C - **See Figure 1**. Leviton Model 28A00-1 (Surface) or Model 28A00-2 (Flush) Speaker/Microphone Modules and/or Model 33A00-4 Omni Consoles and Model 33A00-20 Lumina Keypads with Built-in Speaker/Microphone can be used. **NOTE:** Do not mount speakers, microphones, 28A00 modules, 33A00-4 consoles, or 33A00-20 keypads near any device that may produce noise (fans, air conditioning units, audio speakers, etc.).

Microphones:

Microphones should be connected with 24 AWG or larger, shielded twisted pair wire. Wire length should not exceed 100 feet. Connect the cable shields and negative wires together at the Model 10A11-1, Rev C terminal block only. **Do not connect the shield on the microphone end.** Additional microphones can be connected to each input in parallel.

Speakers:

Speakers should be connected with 18 AWG or larger, twisted pair wire. For wire runs that exceed 50 feet, use 16 AWG wire or larger. Wire length should not exceed 100 feet. Additional speakers can be connected to each output in series.


Line-Level Audio Output:

A power amplifier may be connected to the line-level audio output using a 3.5mm patch cable. This is typically used to announce the audio output from the Model 10A11-1, Rev C throughout a home when used with a whole home audio distribution system.

Page Output:

The page output provides a contact closure whenever the Model 10A11-1, Rev C generates audio. This is typically used to trigger the paging feature of a whole home audio distribution system.

Figure 1 - Speaker/Microphone Connections

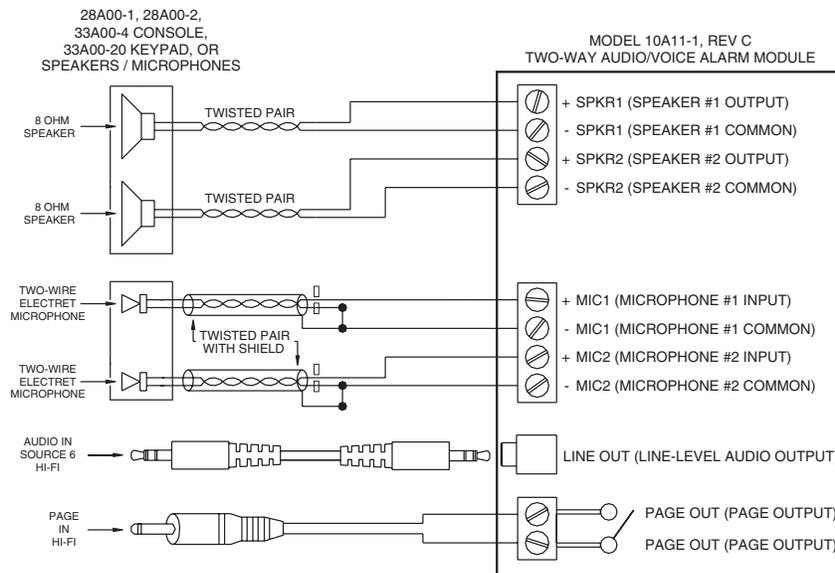

MOUNTING

When mounting and connecting the Model 10A11-1, Rev C, **power down the controller** (AC and battery). Connecting the Model 10A11-1, Rev C board, while power is still applied to the controller, can damage the board, the controller, or both.

Mount the Model 10A11-1, Rev C to the upper right side of the enclosure using the supplied adhesive-backed resealable fasteners.

When connecting to an OmniLT, route the cable to the connector on the top of the board marked "J1". Plug the Model 10A11-1, Rev C cable into "J1" on the controller.

The red wire should be to the left of the connector (red wire to Pin 1) - **See Figure 2**.

Make sure that the connector is aligned with the pins on "J1".

When connecting to an Omni II, OmniPro II, Lumina, or Lumina Pro, route the cable along the top of the enclosure to the connector on the left side marked "J2". Plug the Model 10A11-1, Rev C cable into "J2" on the controller. The red wire should be to the top of the connector - **See Figure 3**. Make sure that the connector is aligned with the pins on "J2".

WEB VERSION

CONTROLLER SETUP

When using a Model 10A11-1, Rev C for two-way communication with a central station, the Two-Way Voice option must be enabled. From the Installer Setup menu, select the 3 (DCM) key. Press the down arrow () key until you reach the Two-Way Audio option:

TWO-WAY AUDIO: 0
0=NO 1=YES

Press 1 (YES), and then press '#' to enable two-way audio communication.

When using a Model 10A11-1, Rev C to announce alarms, the Announce Alarms option must be enabled. To enable this option, from the Setup menu press the 6 (MISC) key.

Press the down arrow () key to until you reach the Announce Alarms option:

ANNOUNCE ALARMS: 0
0=NO 1=YES

Press 1 (YES), and then press '#' to enable the system announce alarms.

OPERATION

The Two-Way Audio Module has two modes of audio communication:

- 1. Listen mode** is used to listen to the premises from an inside, remote, or central station telephone. You cannot talk to anyone on premises in listen mode. Whenever the module is switched on, it is set to the listen mode.
- 2. Talk mode** is used to talk to someone on-premises from an inside, remote, or central station telephone. You cannot listen to the premises while in the talk mode. The mode can be changed between listen and talk by using the keys on a phone. When the module is switched on, a 90 second disconnect timer is started. If no tones are detected within 90 seconds, the module will be switched off. Each time a tone is received, the timer is reset.

CENTRAL STATION OPERATION

When an alarm occurs, the communicator first sends the appropriate report to the central station. After the transmission of the alarm to the central station, the operator can talk and listen to people and sounds at the premises. After the report is received by the central station operator, the Two-Way Audio Module is switched on. The central station operator can now listen to the premises. The module is always first switched on in the listen mode. The operator can control the direction of the communication by using the Touch-Tones on a telephone. Each time the operator switches between the listen and the talk mode, a short tone will sound over the audio speaker at the subscriber's premises. This alerts the subscriber that the operator has switched communication mode. If no tones are detected within 90 seconds, the module will disconnect from the phone line.

PRESS 2 FOR CENTRAL STATION TO TALK TO THE PREMISES
PRESS 8 FOR CENTRAL STATION TO LISTEN TO THE PREMISES
PRESS 4 TO DISCONNECT (HANG UP) THE PHONE LINE

When the Two-Way Audio Module is switched on after an alarm transmission, the siren is automatically switched off so the central station can listen and talk to the premises.

PAGING AND LISTENING

By accessing the telephone menu, you can use an inside or remote phone to talk (page) and listen to someone on the premises.

- 1) From the main telephone menu choose the 8 (PHONE).**
- 2) To talk or listen to the premises, press the 3 (INTERIOR).**
- 3) To talk to someone at the premises, press the 2 key.**
- 4) To listen to the premises, press the 8 key.**
 - If no key is pressed, the system will automatically switch to listen mode.
 - When complete, press * to return to the main telephone menu.
 - If no tones are detected within 90 seconds, the module will switch off and you will return to the main telephone menu.

ANNUNCIATION OF ALARM

The Voice Alarm Module enables the system to speak the type of alarm and zone over a speaker on premises. When an alarm first occurs, the siren is activated. After a few seconds, the siren is turned off and the type of alarm is announced. The siren is then reactivated. After a few seconds, the siren is again turned off and the violated zone is announced. The siren is then reactivated. This process is repeated until the alarm is disarmed or reset.

NOTE: During central station communication (while the system is reporting an alarm to the central station), voice alarm notifications are temporarily suspended. After the successful transmission of the alarm to the central station, voice alarm notifications are restarted.

SPEAKER VOLUME CONTROL

The volume of the audio can be controlled by adjusting a variable resistor on the module. Use a small screwdriver to adjust R35 labeled "Speaker Volume".

Do not adjust R59 labeled "Audio Cancel". This variable resistor is adjusted at the factory to its optimal setting.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at **Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9** or by telephone at **1 800 405-5320**.

LEVITON LIMITED WARRANTY

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that products manufactured by Leviton under the Leviton brand name ("Product") will be free from defects in material and workmanship for the time periods indicated below, whichever is shorter: • **OmniPro II and Lumina Pro:** three (3) years from installation or 42 months from manufacture date. • **OmniLT, Omni Ile, and Lumina:** two (2) years from installation or 30 months from manufacture date. • **Thermostats, Accessories:** two (2) years from installation or 30 months from manufacture date. • **Batteries:** Rechargeable batteries in products are warranted for ninety (90) days from date of purchase. **Note:** Primary (non-rechargeable) batteries shipped in products are not warranted. • **Products with Windows® Operating Systems:** During the warranty period, Leviton will restore corrupted operating systems to factory default at no charge, provided that the product has been used as originally intended. Installation of non-Leviton software or modification of the operating system voids this warranty. Leviton's obligation under this Limited Warranty is limited to the repair or replacement, at Leviton's option, of Product that fails due to defect in material or workmanship. Leviton reserves the right to replace product under this Limited Warranty with new or remanufactured product. **Leviton will not be responsible for labor costs of removal or reinstallation of Product.** The repaired or replaced product is then warranted under the terms of this Limited Warranty for the remainder of the Limited Warranty time period or ninety (90) days, whichever is longer. This Limited Warranty does not cover PC-based software products. **Leviton is not responsible for conditions or applications beyond Leviton's control. Leviton is not responsible for issues related to improper installation, including failure to follow written installation and operation instructions, normal wear and tear, catastrophe, fault or negligence of the user or other problems external to the Product.** To view complete warranty and instructions for returning product, please visit us at www.leviton.com.

Use herein of third party trademarks, service marks, trade names, brand names and/or product names are for informational purposes only, are/may be the trademarks of their respective owners; such use is not meant to imply affiliation, sponsorship, or endorsement.