




ClareVision Video  
Surveillance

## **Varifocal Series Turret Camera Installation Guide**

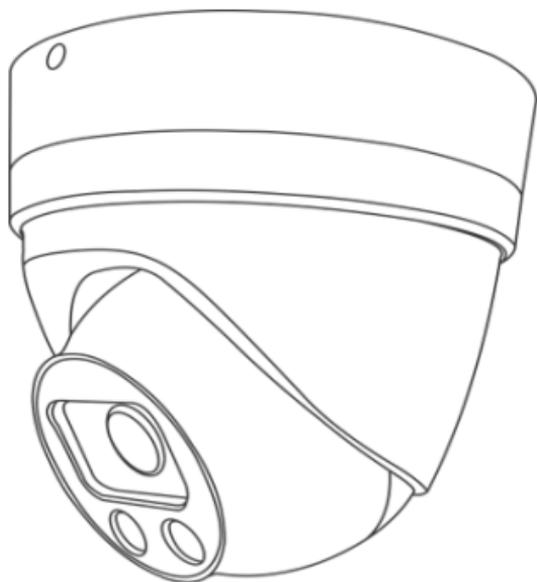

For Setting up cameras and complete user manuals, please scan these QR codes:

### Quick Start Guide



<https://bit.ly/34bIIIND>

### User Manual



<https://bit.ly/34eKmsq>

## Box Contents

- Camera
- Mounting template
- Mounting kit
- Accessory kit

## Required Equipment

- Phillips head screwdriver
- Power source: Ethernet cable
- Drill with ¼" drill bit

## Inspection

Ensure that the device is in good condition and all the assembly parts are included.


- Make sure that all equipment is powered off during installation.
- Ensure the mounting surface is strong enough to withstand three times the weight of the camera and the mount.
- If the product does not function properly, please contact technical support. **Do not disassemble the camera for repair or maintenance.**



WARNING: This product can expose you to chemicals including cadmium, which which is known to the State of California to cause cancer. For more information, go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

## Overview


Before installing, familiarize yourself with the different parts of the camera.

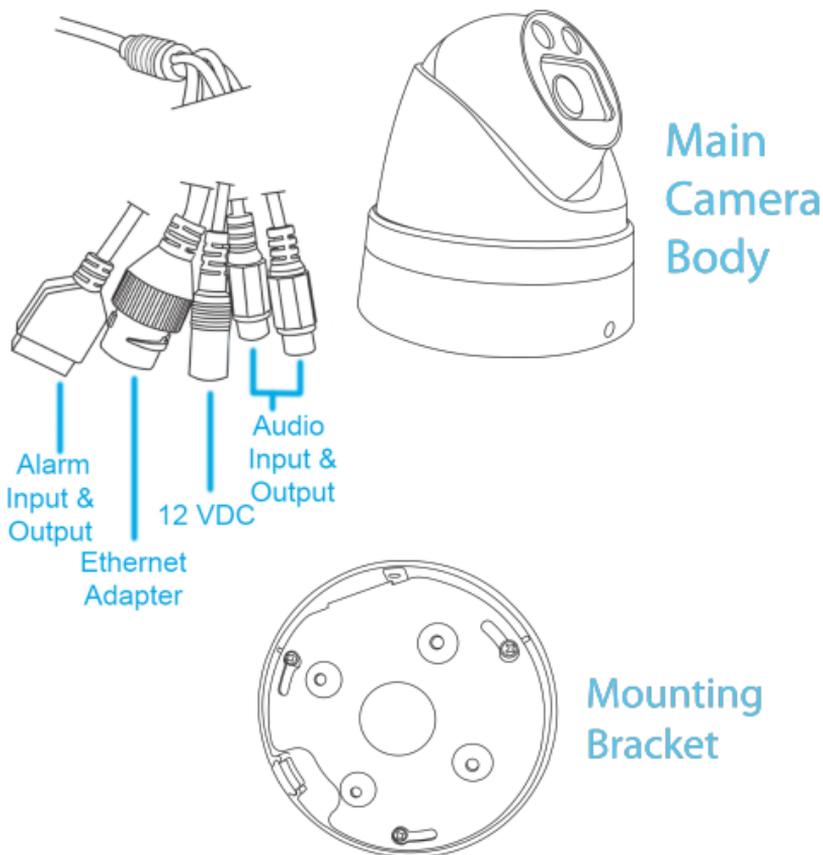


## Installation

1. Drill a cable hole and ¼" pilot holes, using the supplied template.

2. Using the provided hex-key, loosen the machine screw on the side. and remove the base.

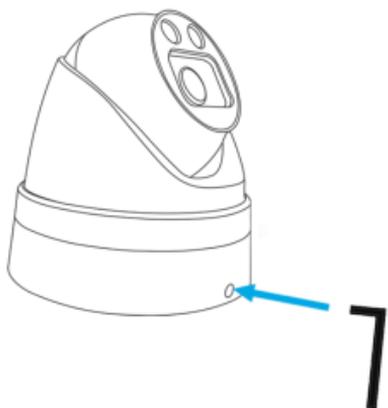


3. Rotate the mounting bracket base, aligning the screws with the exit holes and remove the base.

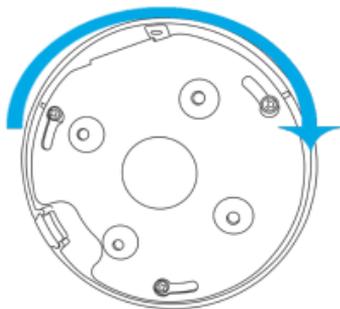


**Note:** When removing the base, do so on a flat surface to avoid dropping the camera body.

## Installation

4. Insert the drywall anchors. Secure the base to the mounting surface using provided screws.

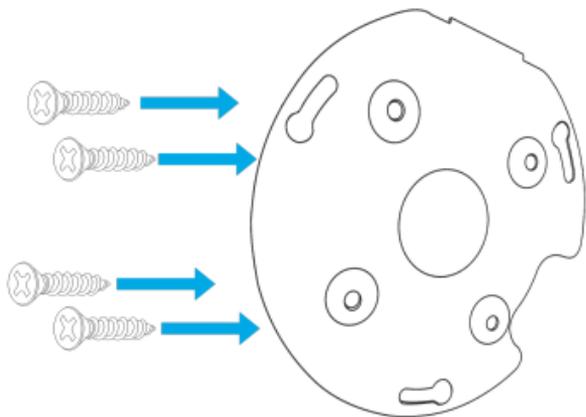

5. Connect an ethernet cable that is connect-  
ed to the desired POE enabled network into  
the camera's ethernet adapter.

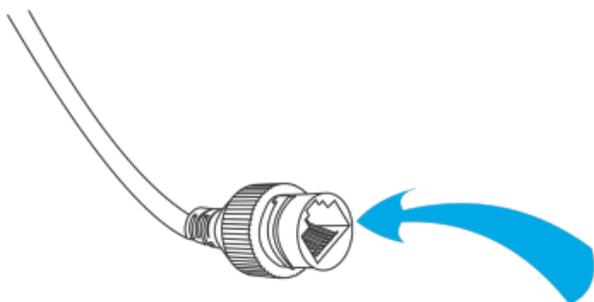


## Installation


6. Rotate the camera body to the desired viewing angle.



7. Snap the camera body into the base and rotate the screws into their slots until secure.

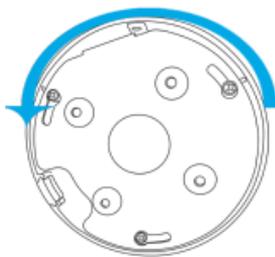

8. Using the provided hex-key, tighten the machine screw on the side until the camera body is secured firmly to the base.

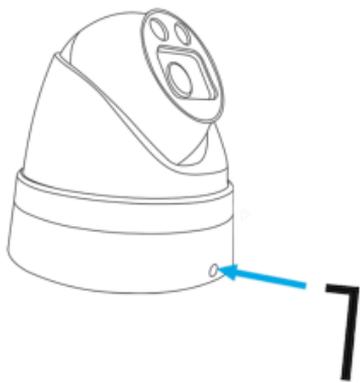

## Support

### **Need help? Contact Tech Support!**

If you need further clarification, please contact our support staff.

### **Integrator/Dealer Support:**

**Phone:** 941.404.1072

**Email:** [claresupport@clarecontrols.com](mailto:claresupport@clarecontrols.com)

For more information, instructional videos, or support documentation, visit our Help Center and view your item's product page:

<https://www.clarecontrols.com/helpcenter>

## Contact Information

### **Clare Controls, LLC.**

7519 Pennsylvania Ave, Suite 104

Sarasota, FL 34243

**General:** 941.328.3991

**Fax:** 941.870.9646

[www.clarecontrols.com](http://www.clarecontrols.com)

## Warranty Information

Clare Controls offers a two (2) year limited warranty on original Clare Controls components, from the date of shipment from Clare Controls. To view complete limited warranty details, including limitations and exclusions, please visit:

[www.clarecontrols.com/warranty](http://www.clarecontrols.com/warranty)

## Camera Information

Please provide this guide to the customer and notate the camera installation location. This guide includes important camera details.

Installattion Location: \_\_\_\_\_

Camera Details:

