




CONNECTION DIAGRAM

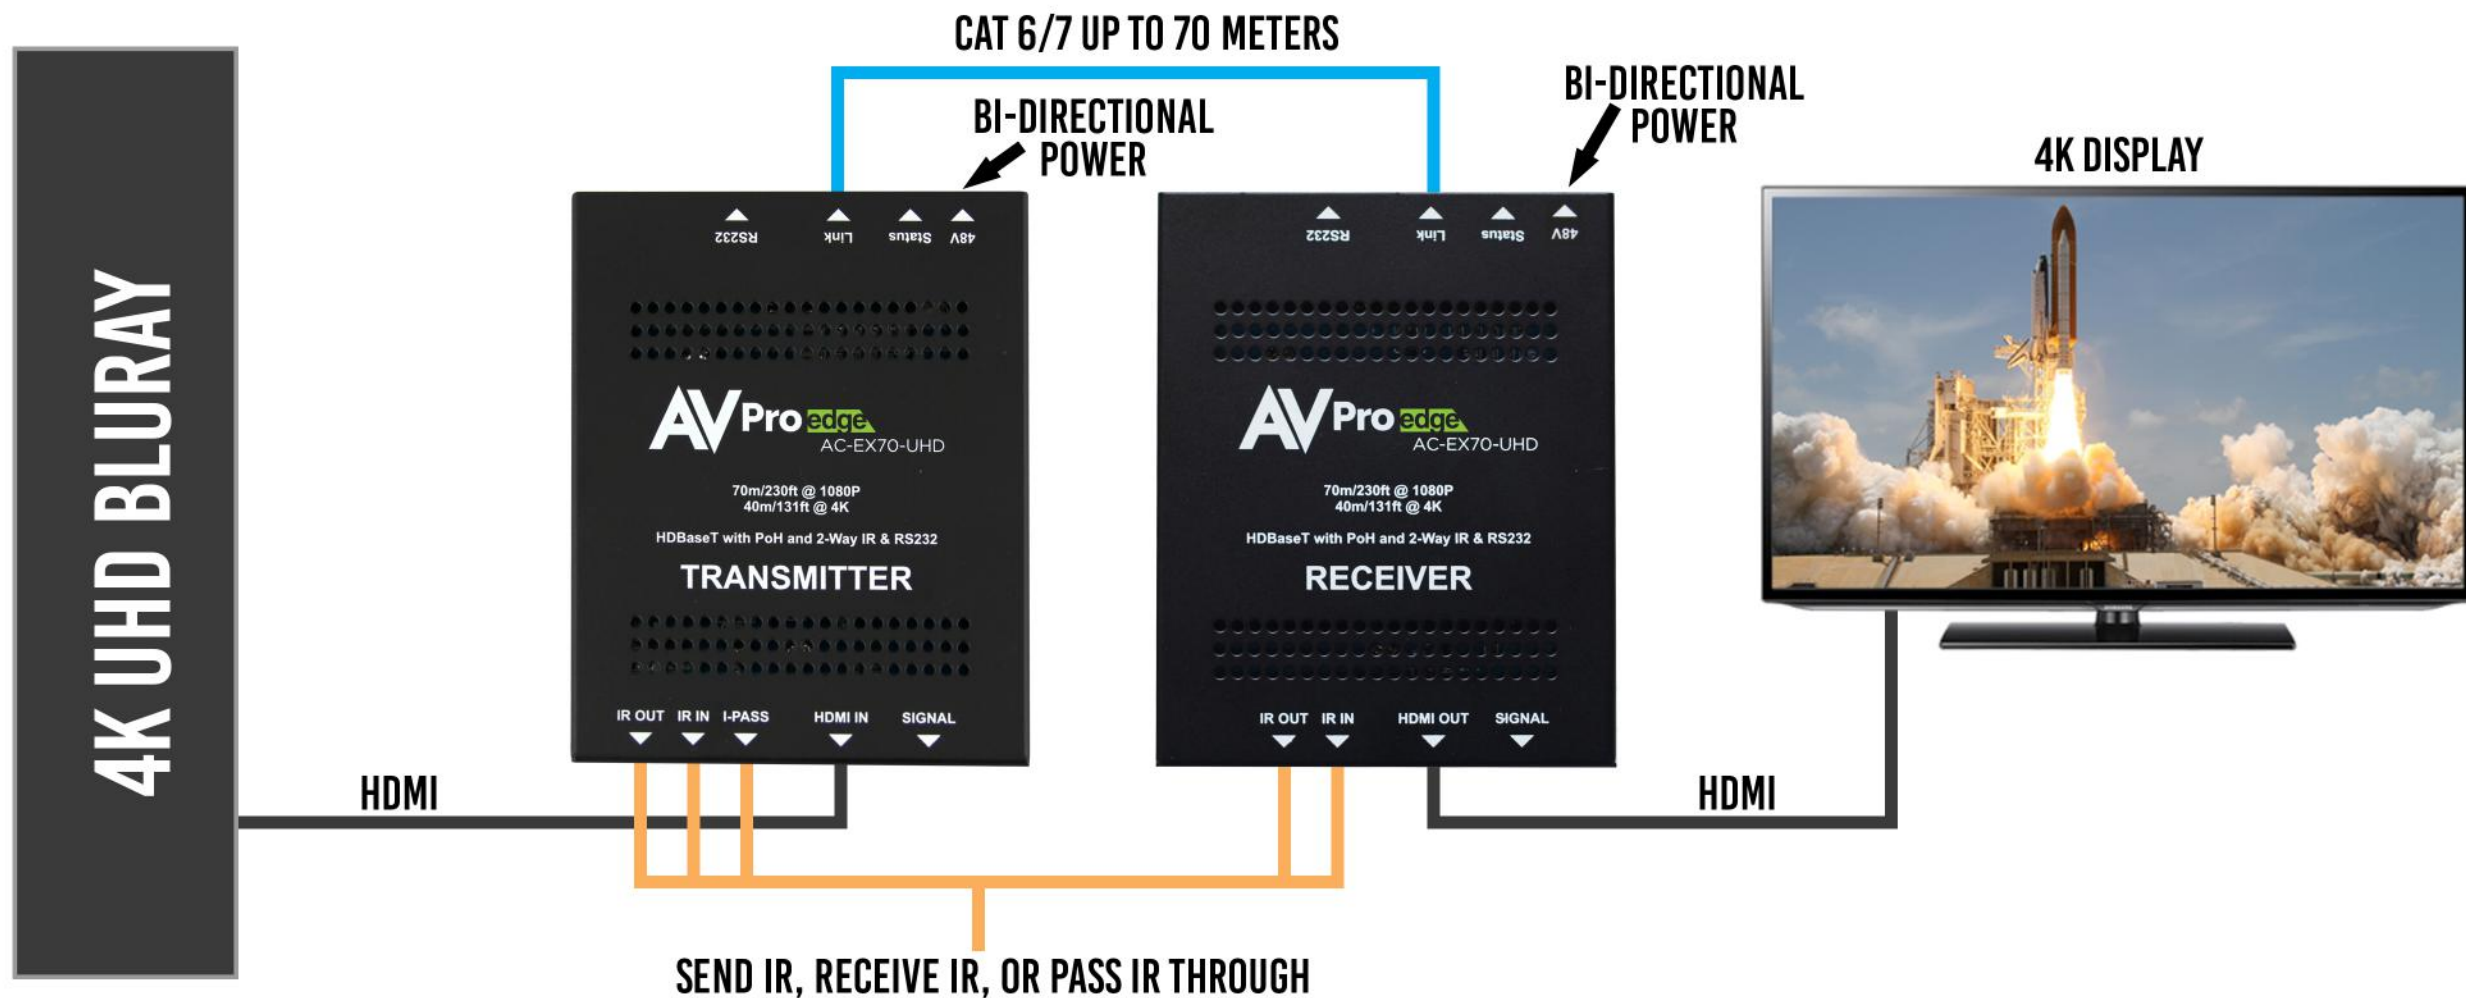

IR CONTROL - IPASS

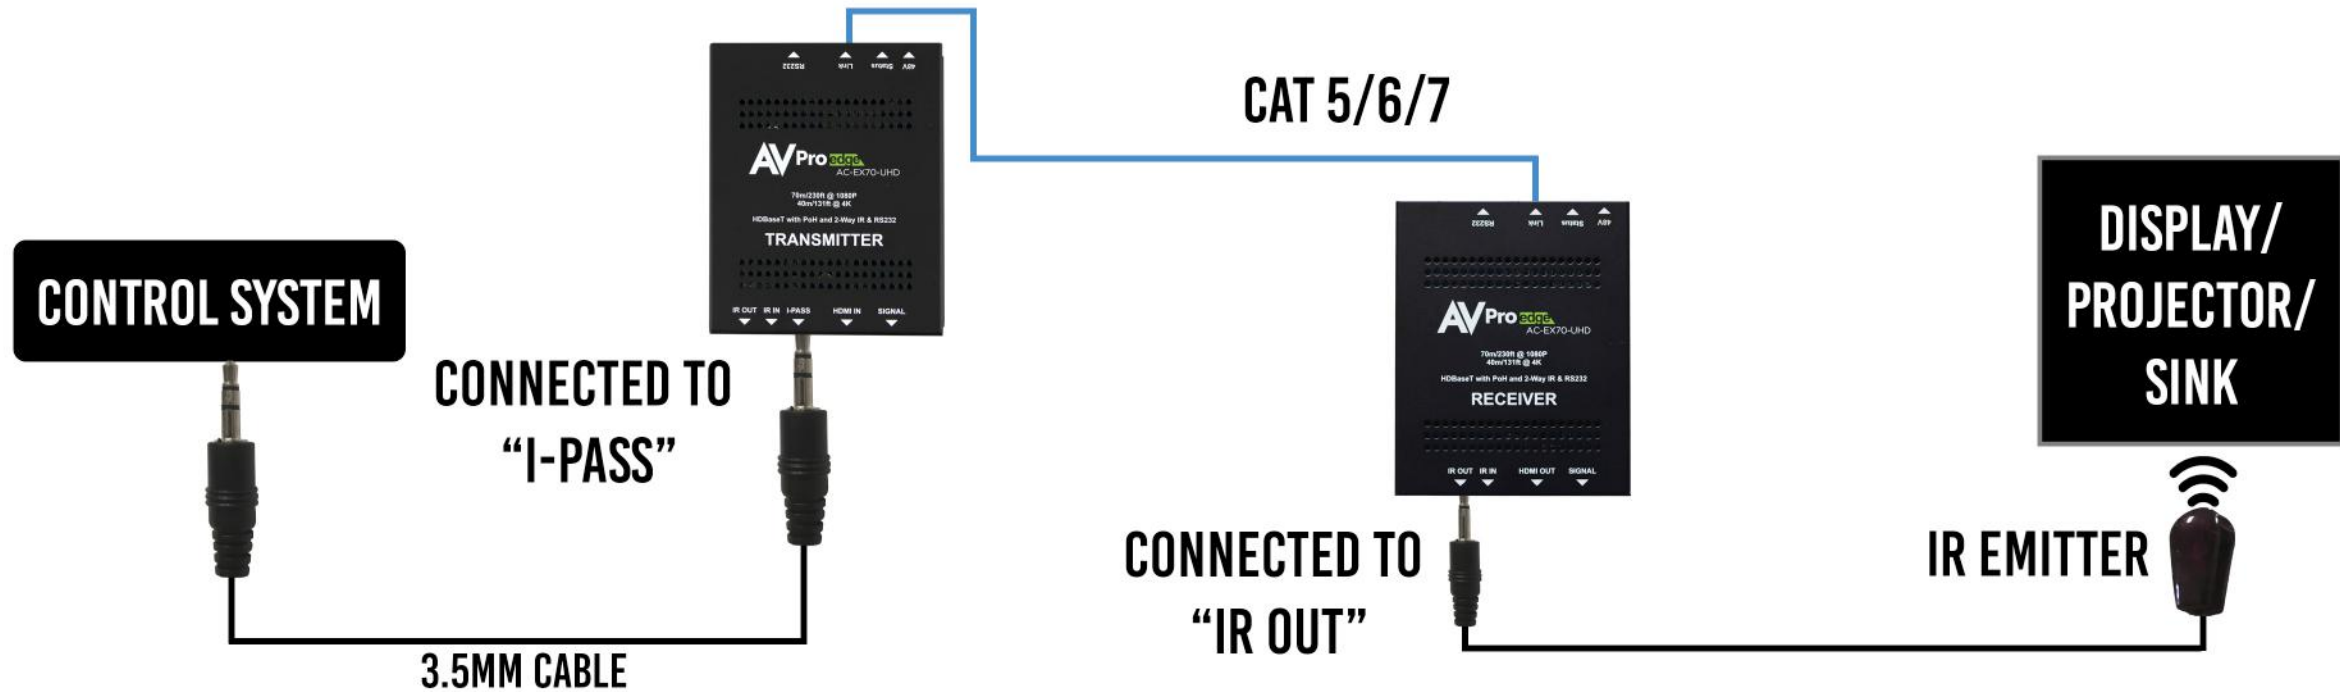

EXTENDER IR PASSTHROUGH

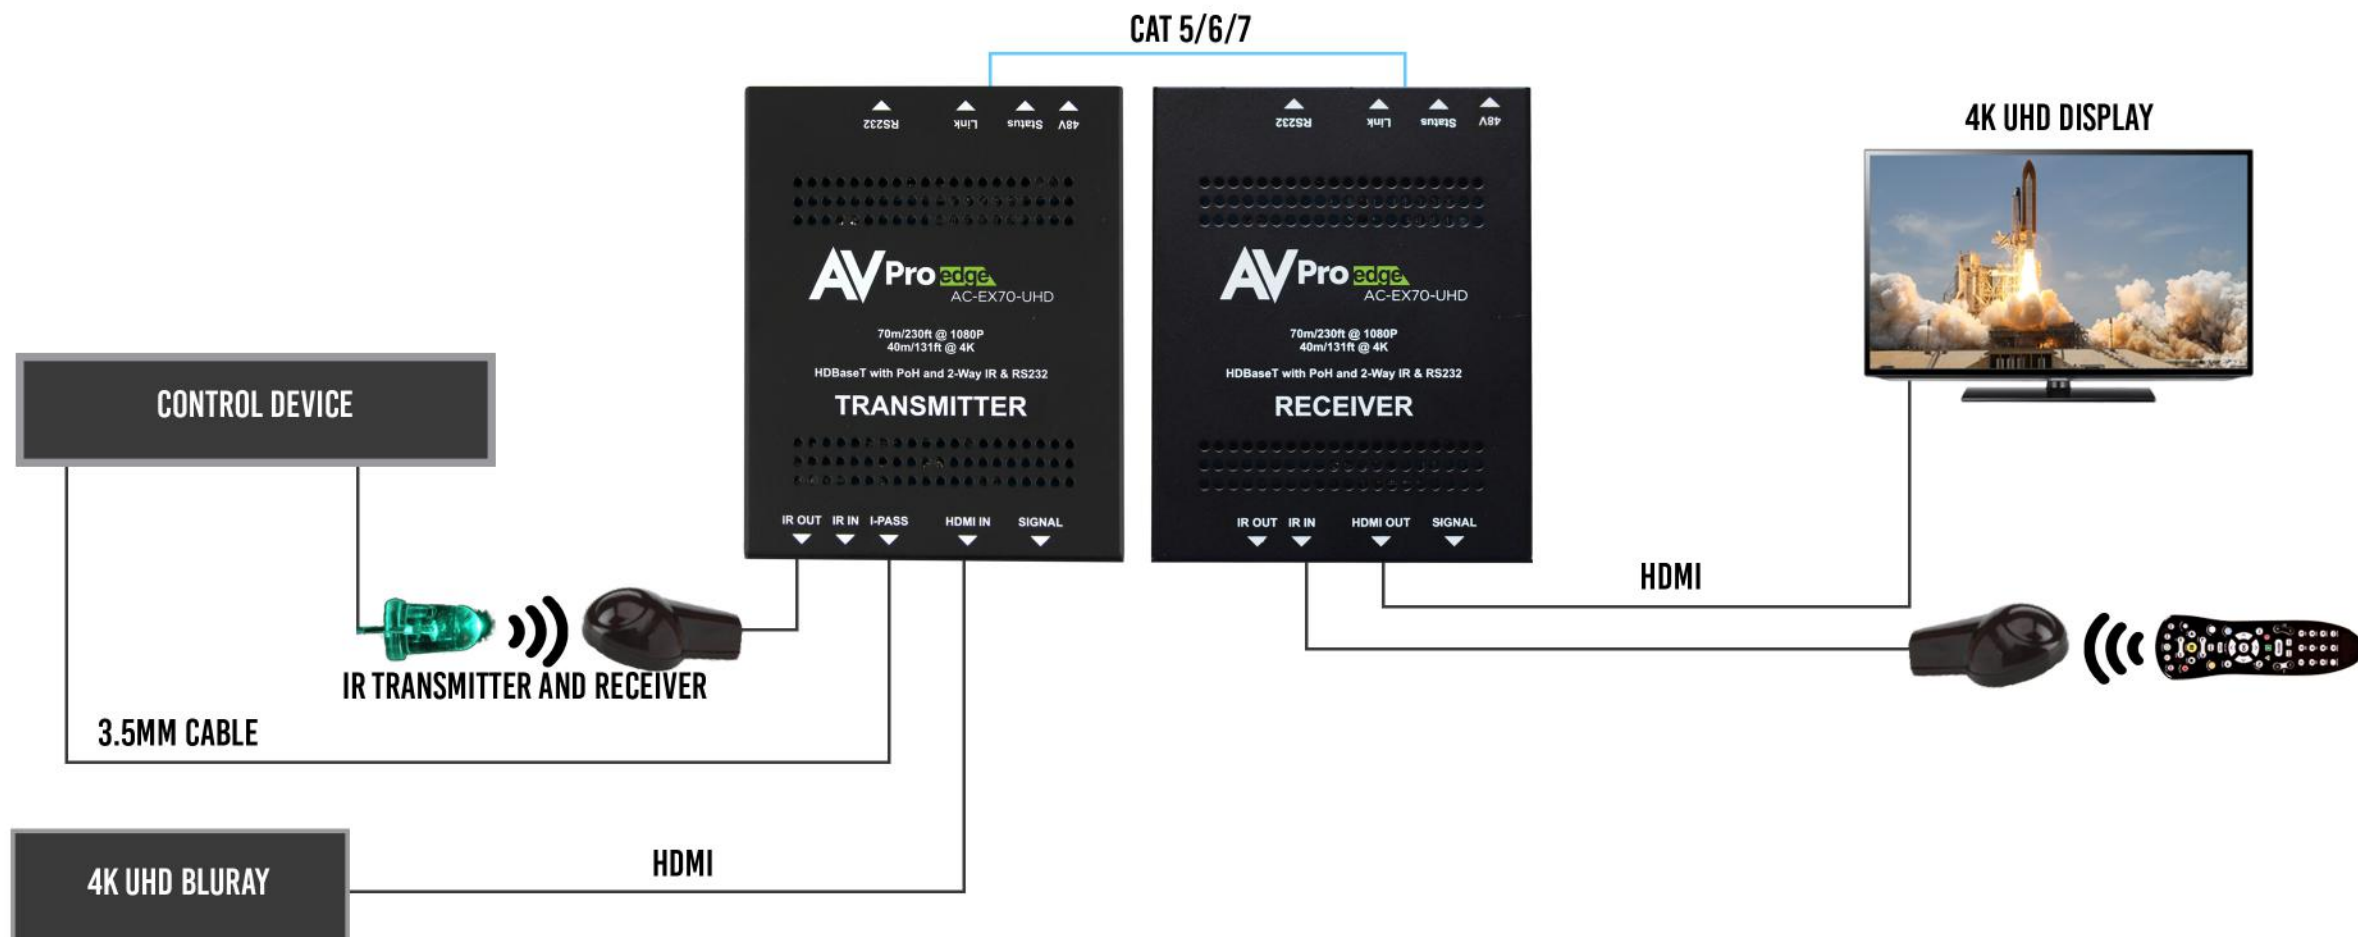

YOU CAN PUT POWER HERE OR HERE

CAT 6/7 UP TO 70 METERS



BUT YOU ONLY HAVE TO POWER ONE SIDE

IR CONTROL - SENDING

