



Installation Instructions

- installation frames


cerasonar
invisible speakers

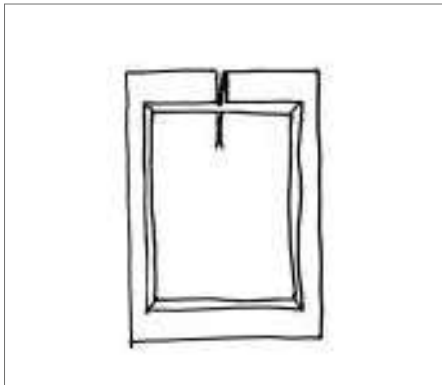


create recess and feed
loudspeaker cable

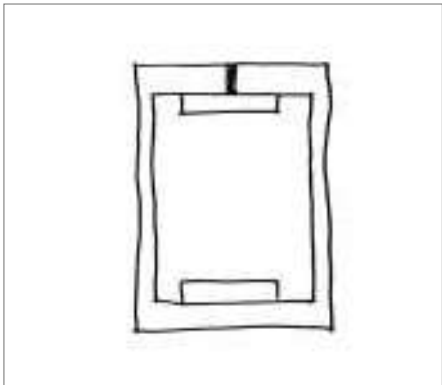


Inserting and aligning the
installation frame

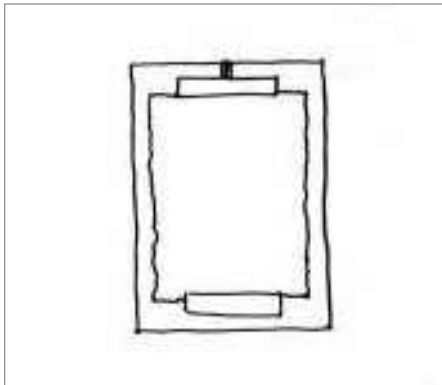


Fix with 2k expansion foam,
e.g. 2K-Ponal Rapido PNR10

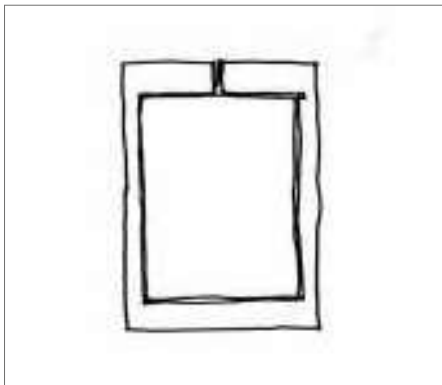


Remove auxiliary wood and
auxiliary plate

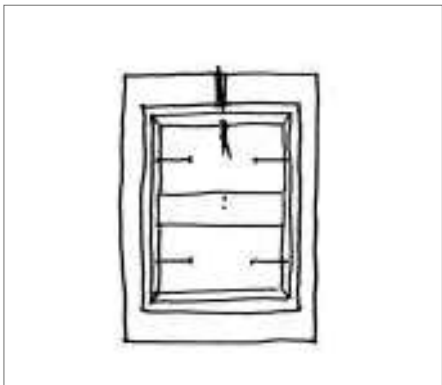

Dowel frame (optional)

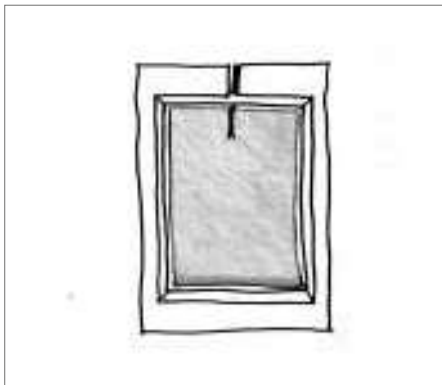

Fill cavity with mineral wool

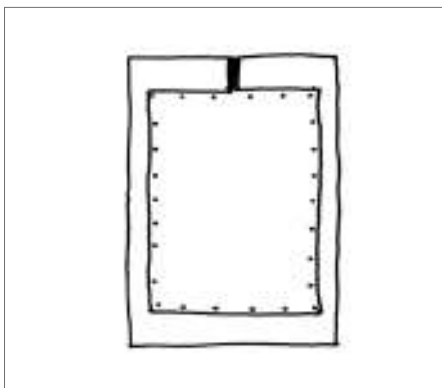

From here the installation
instructions of the specific
models follow